



Market Central[®]
www.secureswitch.com

19 North Main Street, Houston, PA 15342 USA
412.494.2800 **CAGE 1BGJ7**

June 2015
Part Numbers

Fiber Driver ST Female (Lead Free)	61-00091
Fiber Driver - ST - Female	51-00091
Fiber Driver ST Male (Lead Free)	61-00093
Fiber Driver - ST - Male	51-00093

FIBER DRIVER



Federal Communications Commission (FCC) Statement

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Contents

Chapter	Page
1. Specifications	2
2. Introduction	3
3. Installation	3
4. Troubleshooting	5

1. Specifications

Power

Wall-mount Power Supply, 100-240 VAC/47-63 Hz Input, 5 VDC, 1.2 Amp Output, UL/CUL

Interface

EIA RS-232-C; CCITT V.24, V.28; ISO 2110

Flow Control

Will pass XON/XOFF only.

Size

1"H x 2.7"W x 4.2"L

Weight

1.4 lb. includes supply

Data Rate

Transparent to rates up to 76.8 kbps (high/low speed jumper)

Data Format

Asynchronous, Bi-Directional

Connectors

(1) - DB25 female or male, (2) - fiber optic ST

Switches

(1) - DCE/DTE toggle

Fiber Optic Wavelength

850 nm

Receiver Sensitivity

Typical: 3.0 uW / -25.2 dBm

Transmitter Output

See Table 1.1

Transmitter Coupled Power

Actual coupled power varies in fiber optic applications due to mechanical alignment of components and/or connector and optical fiber tolerances. The Fiber Driver provides a range select feature that allows the user to compensate for these variations as needed.

Table 1.1 Transmitter Coupled Power Settings (W3)

cable type	short range (uW/dBm)	medium range (uW/dBm)	long range (uW/dBm)
multimode 50/125 um	4.0/-24.0	12.0/-19.2	20.0/-17.0
multimode 62.5/125 um	10.0/-20.0	28.0/-15.5	46.0/-13.4
multimode 100/140 um	24.0/-16.2	72.0/-11.4	120/-9.2

(NOTE: Set jumper W3 to the lowest power setting for your application to avoid saturating the far-end unit's receiver.)

Power Budget and Distance Calculations

Power Budget = Transmitter Output - Receiver Sensitivity

Distance = Power Budget / (Loss/km)

Example:

Receiver Sensitivity = -25.2 dBm

Transmitter Output = -13.4 dBm

Loss/km = 3.5 dB/km

Power Budget = 11.8 dB

Distance = 3.4 km

2. Introduction

The Fiber Driver converts standard RS-232 signals into fiber optic signals, which can then be transmitted over several kilometers depending on cable type and power setting. These devices support asynchronous, bi-directional RS-232 data transmission. They are switch selectable for either DTE or DCE application, eliminating the need for special cables and preventing confusion during installation. They can be ordered with male or female DB25 connectors for the RS-232 interface. Two units are connected using 50, 62.5, or 100 micron multi-mode fiber optic cable with ST style connectors.

3. Installation

Before you begin, make sure all equipment is powered off, including the Fiber Drivers.

Remove the two screws and lift off the cover to access the internal configuration jumpers on the Fiber Driver. Set jumpers W1, W2, and W3 as appropriate for your application (see Figure 3.1 and Table 3.1). Reinstall the cover, and then set toggle switch S1 for either DTE to connect to a PC, or DCE to connect to a modem. Connect the two fiber drivers using multi-mode fiber optic cables with ST style connectors. Make certain that the transmitter output of each unit is connected to the receiver input of the other unit.

Next, connect the Fiber Drivers to your RS232 devices, either by attaching the Fiber Drivers directly to the RS232 connector on your devices, or using straight through cables. Power up the Fiber Drivers, and then apply power to your equipment.

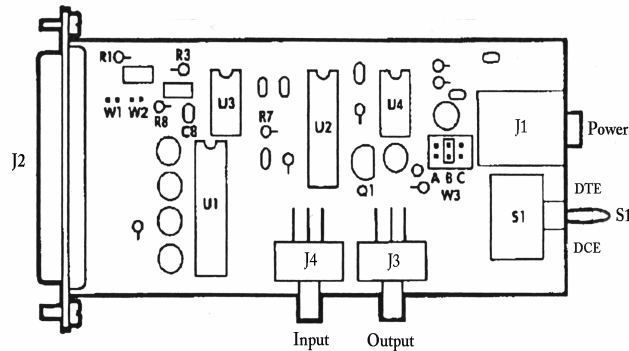


Figure 3.1 – Fiber Driver Outline

Connectors

- J1 - DC Power Jack (5 VDC)
- J2 - DB25 RS-232 (Male or Female)
- J3 - Fiber Optic Transmitter (ST)
- J4 - Fiber Optic Receiver (ST)

Table 3.1 - Jumper Settings

Jumper	Function	Use
W1	Pull-up to +5	Install to assert pin 6 on DB26
W2	High speed filter	Install to operate at rates above 19.2 kbps
W3	Range select*	A-short range, B-medium range, C-long range

*Range selection is dependent upon the core size of the fiber optic cable used and the distance data is to be transmitted. Select the shortest range that accurately passes data.

Table 3.2 - RS232 Connector (J1)

Pin - Signal	DCE Interface Function (S1-A)	DTE Interface Function (S1-B)
2 - Transmitted Data	Output	Input
3 - Received Data	Input	Output
4 - Request To Send	connected to pin 5	connected to pin 5
5 - Clear To Send	connected to pin 4	connected to pin 4
6 - Data Set Ready (note 1)	Pulled High	Pulled High
7 - Common	Ground	Ground
8 - Data Carrier Detect	connected to pin 20	connected to pin 20
20 - Data Terminal Ready	connected to pin 8	connected to pin 8
22 - Ring Indicator	Open	Open

DCE - Data Communication Equipment

DTE - Data Terminal Equipment

Set toggle switch S1 for either DTE to connect to a PC, or DCE to connect to a modem.

Note 1: Pin 6 DSR is pulled to +5 volts through jumper W1. Please see Table 3.1 for details.

4. Troubleshooting

If the Fiber Drivers fail to operate check the following before calling for technical support.

1. Are unit powered on? Check to see if the power supplies are plugged into a working AC outlet.
2. Check to see if the inter-connect fiber optic cable is connected properly; transmitter to receiver.
3. Check to see if the DCE/DTE setting is appropriate for the interfacing equipment.
4. Check transmitter power settings.

MARKET CENTRAL, INC.
WARRANTY AND LIMITATION OF LIABILITY

Market Central, Inc. ("Market Central") warrants that the products manufactured and sold by it or by one of its authorized resellers will, when sold, be free of defects in workmanship or material under normal service and use. Products which have been changed or altered in any manner from their original design, or which are improperly or defectively installed, serviced or used, are not covered by this warranty. If any failure to conform to this warranty becomes apparent during a period of ____ year after date of sale, Market Central shall, upon prompt, written notice and compliance by the customer with such instructions as it shall give with respect to the return of defective products or parts, correct such non-conformity by repair or replacement of the defective part of parts. Correction in the manner provided above shall constitute a complete fulfillment of all obligations and liabilities of Market Central with respect to the quality of said products. THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF QUALITY, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE.

THIS WARRANTY AND THE OBLIGATIONS AND LIABILITIES OF MARKET CENTRAL HEREUNDER ARE EXCLUSIVE AND IN LIEU OF AND BUYER HEREBY WAIVES ALL OTHER REMEDIES, WARRANTIES, GUARANTIES OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE (INCLUDING WITHOUT LIMITATION ANY OBLIGATIONS OF MARKET CENTRAL WITH RESPECT TO FITNESS FOR PURPOSE, MERCHANTABILITY AND INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR LOST PROFITS) OR WHETHER OR NOR OCCASIONED BY MARKET CENTRAL'S NEGLIGENCE. THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT SIGNED BY A DULY AUTHORIZED OFFICER OF MARKET CENTRAL.

Market Central, Inc.

19 North Main Street

Houston, PA 15342

USA

www.seureswitch.com CAGE Code 1BGJ7

412.494.2800

Market Central[®] is a registered trademark of Market Central, Inc.

Copyright[©] 2015 Market Central, Inc. All rights Reserved